

Dear Customer,

This Quick Start Guide is enclosed with detailed dishwasher Operating Instructions. Before using the appliance carefully read the Operating Instructions, especially guidelines for safe use.

Before plugging your dishwasher into the mains power, remove the safety packaging. Do not start the dishwasher before it is properly set up.

1 Turn on the appliance

- Open the dishwasher door, press the on/off button. Power indicator will be on

2 Dispense detergent

- Press the latch to open the detergent dispenser.
- Add detergent to the dispenser.

3 Check the special salt level

- Add special salt to the dispenser when the corresponding indicator on the control panel comes on.

4 Load the dishes

- Remove food leftovers from the dishes
- Place the dishes in the baskets according to loading guidelines.
- It is recommended to load the lower basket first, then the upper basket.

5 Select the wash programme

- Open the door, press the Power button. Choose a program, the response light will turn on.
- Then close the door, the dishwasher will start its cycle.

6 Start your dishwasher

- Open the dishwasher door.
- The dishwasher will start a wash programme.

7 Turn off the appliance

 
 
- Turn the appliance off using the On/Off button.

8 Remove dishes from the appliance

- When the dishwasher is off, open the door and wait about 15 minutes before removing the dishes. This will also facilitate the drying process. Hot dishes are more susceptible to cracking.





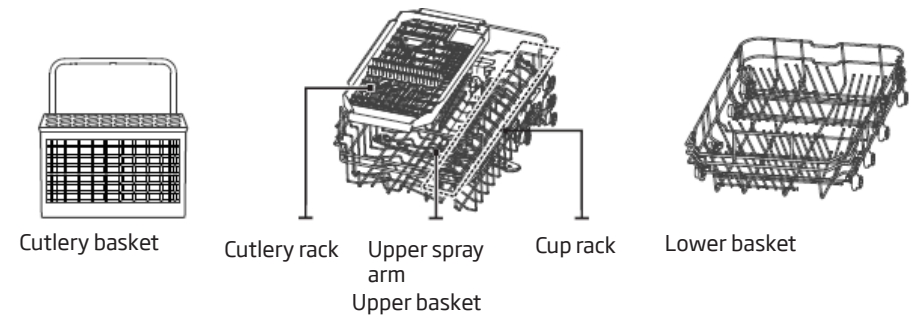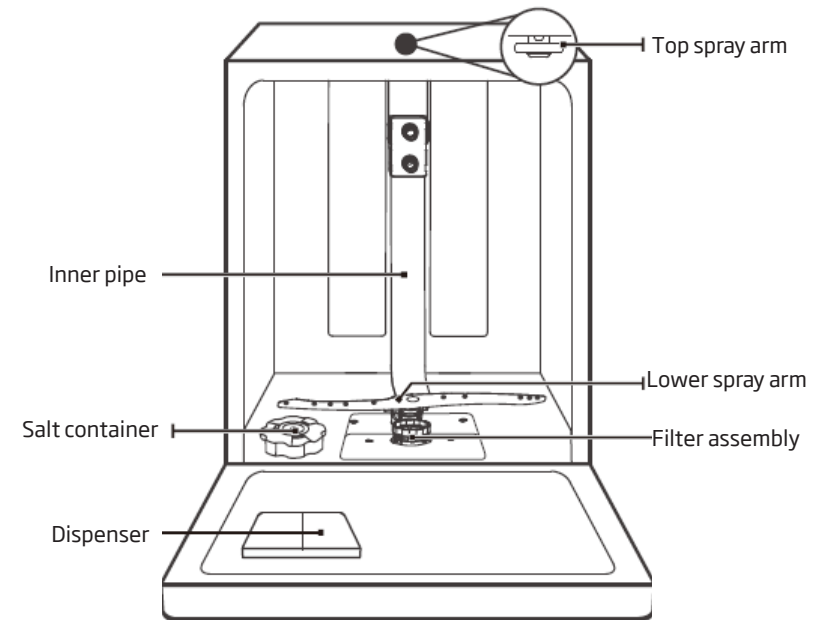

9 Features and components

- Spray arms
- Cutlery basket
- Upper basket
- Inner tube
- Lower basket
- Salt container
- Detergent dispenser
- Mugs and cups shelves
- Main filter
- Water supply hose connection
- Water drain hose
- Regulator



NOTE: Figures are for illustrative purposes only Individual models may vary.

TABLE OF WASH PROGRAMMES: ZIM466TH

ITEM	Programme name	The default temperature [°C]	Type of soil	Soil level	Amount of detergent		Type of cycle					Duration [min.] *	Power consumption [kWh] *	Water consumption [litres] *
1	Hygiene 	70°	With the Sanitize option selected, the water temperature is increased to 70 °C for high temperature sanitization.	Intensive soil	25g (1 or 2 items)	Wash 70°C	Rinse	Rinse	Rinse 70°C	Dry		200	1.440	12.4
2	1 hour 	60°	For normally soiled loads that need quick wash.	Light soil	5g / 20g (1 or 2 items)	Pre-wash 35°C	Wash 60°C	Rinse	Rinse 60°C	Dry		60	1.060	13.1
3	**ECO 	45°	Lightly soiled glass-ware and porcelain.	Light soil	25g (1 or 2 items)	Wash 45°C	Rinse	Rinse 60°C	Dry			230	0.741	8.0
4	Self-Cleaning 	70°	This program provides an effective cleaning of the dishwasher itself.	Light soil	5g / 20g (1 or 2 items)	Pre-wash	Wash 70°C	Rinse	Rinse 70°C	Dry		145	1.270	13.3
5	Auto 	55-65°	For lightly, normally or heavily soiled crockery with or without dried-on food.	Light soil	5g / 20g (1 or 2 items)	Pre-wash 45°C	Wash 55-65°C	Rinse	Rinse	Rinse 55-65°C	Rinse	85-150	0.850-1.240	7.3-16.2
6	Nightwash 	60°	Lower noise and normally energy consumption, used for washing in evening.	Light soil	5g / 20g (1 or 2 items)	Pre-wash 35°C	Wash 60°C	Rinse	Rinse 65°C	Dry		270	1.340	12.9

** Standard programme This is a reference program for research institutes. Tests according to EN 50242.
This programme is suitable for washing normally soiled tableware. This is the most effective programme taking into account the total energy and water consumption for this kind of tableware.

* Programme duration, energy and water consumption value given in the table have been determined under laboratory conditions. Actual values can vary.

DISHWASHER QUICK START GUIDE: ZIM466TH

Dear Customer,

This Quick Start Guide is enclosed with detailed dishwasher Operating Instructions. Before using the appliance carefully read the Operating Instructions, especially guidelines for safe use.

Before plugging your dishwasher into the mains power, remove the safety packaging. Do not start the dishwasher before it is properly set up.

1 Turn on the appliance

- Open the dishwasher door, press the on/off button. Power indicator will be on

2 Dispense detergent

- Press the latch to open the detergent dispenser.
- Add detergent to the dispenser.

3 Check the special salt level

- Add special salt to the dispenser when the corresponding indicator on the control panel comes on.

4 Load the dishes

- Remove food leftovers from the dishes
- Place the dishes in the baskets according to loading guidelines.
- It is recommended to load the lower basket first, then the upper basket.

5 Select the wash programme

- Open the door, press the Power button. Choose a program, the response light will turn on.
- Then close the door, the dishwasher will start its cycle.

6 Start your dishwasher

- Open the dishwasher door.
- The dishwasher will start a wash programme.

7 Turn off the appliance

 
 
- Turn the appliance off using the On/Off button.

8 Remove dishes from the appliance

- When the dishwasher is off, open the door and wait about 15 minutes before removing the dishes. This will also facilitate the drying process. Hot dishes are more susceptible to cracking.





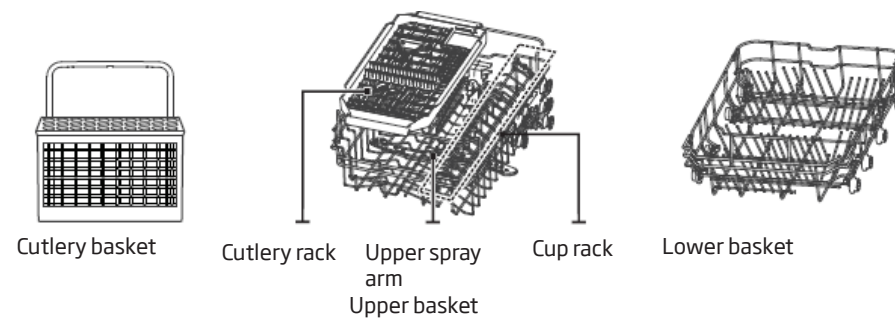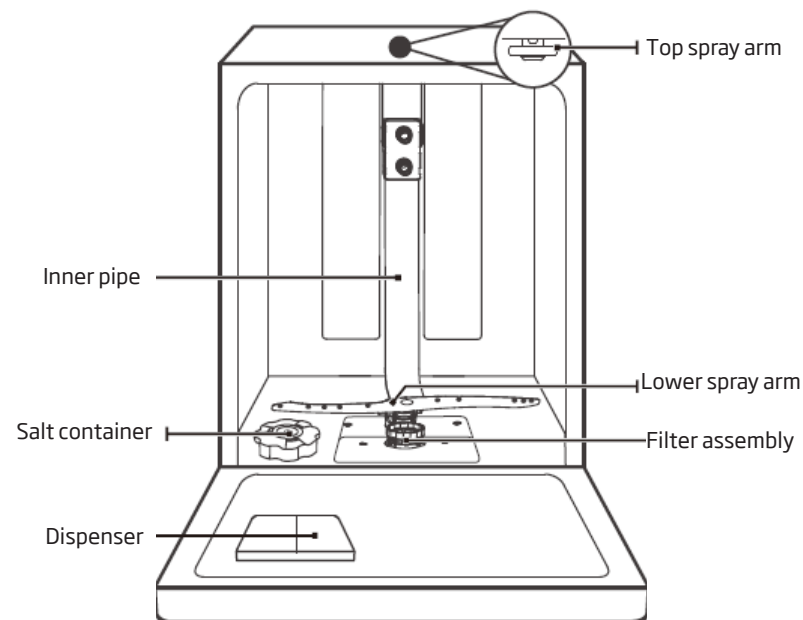

9 Features and components

- Spray arms
- Cutlery basket
- Upper basket
- Inner tube
- Lower basket
- Salt container
- Detergent dispenser
- Mugs and cups shelves
- Main filter
- Water supply hose connection
- Water drain hose
- Regulator



NOTE: Figures are for illustrative purposes only Individual models may vary.

TABLE OF WASH PROGRAMMES: ZIM466TH

ITEM	Programme name	The default temperature [°C]	Type of soil	Soil level	Amount of detergent		Type of cycle					Duration [min.] *	Power consumption [kWh] *	Water consumption [litres] *
1	Hygiene 	70°	With the Sanitize option selected, the water temperature is increased to 70 °C for high temperature sanitization.	Intensive soil	18g (1 or 2 items)	Wash 70°C	Rinse	Rinse	Rinse 70°C	Dry		200	1.440	12.4
2	1 hour 	60°	For normally soiled loads that need quick wash.	Light soil	4g / 14g (1 or 2 items)	Pre-wash 35°C	Wash 60°C	Rinse	Rinse 60°C	Dry		60	1.060	13.1
3	**ECO 	45°	Lightly soiled glass-ware and porcelain.	Light soil	18g (1 or 2 items)	Wash 45°C	Rinse	Rinse 60°C	Dry			230	0.755	8.0
4	Self-Cleaning 	70°	This program provides an effective cleaning of the dishwasher itself.	Light soil	4g / 14g (1 or 2 items)	Pre-wash	Wash 70°C	Rinse	Rinse 70°C	Dry		145	1.270	13.3
5	Auto 	55-65°	For lightly, normally or heavily soiled crockery with or without dried-on food.	Light soil	4g / 14g (1 or 2 items)	Pre-wash 45°C	Wash 55-65°C	Rinse	Rinse	Rinse 55-65°C	Rinse	85-150	0.850-1.240	7.3-16.2
6	Nightwash 	60°	Lower noise and normally energy consumption, used for washing in evening.	Light soil	4g / 14g (1 or 2 items)	Pre-wash 35°C	Wash 60°C	Rinse	Rinse 65°C	Dry		270	1.340	12.9

** Standard programme This is a reference program for research institutes. Tests according to EN 60436.
This programme is suitable for washing normally soiled tableware. This is the most effective programme taking into account the total energy and water consumption for this kind of tableware.

* Programme duration, energy and water consumption value given in the table have been determined under laboratory conditions. Actual values can vary.