

Dear Customer,

This Quick Start Guide is enclosed with detailed dishwasher Operating Instructions. Before using the appliance carefully read the Operating Instructions, especially guidelines for safe use.

Before plugging your dishwasher into the mains power, remove the safety packaging. Do not start the dishwasher before it is properly set up.

1 Turn on the appliance

- Open the dishwasher door, press the on/off button. Power indicator will be on

2 Dispense detergent

- Press the latch to open the detergent dispenser.
- Add detergent to the dispenser.

3 Check the special salt level

- Add special salt to the dispenser when the corresponding indicator on the control panel comes on.

4 Load the dishes

- Remove food leftovers from the dishes
- Place the dishes in the baskets according to loading guidelines.
- It is recommended to load the lower basket first, then the upper basket.

5 Select the wash programme

- Open the door, press the Power button. Choose a program, the response light will turn on.
- Then close the door, the dishwasher will start its cycle.

6 Start your dishwasher

- Open the dishwasher door.
- The dishwasher will start a wash programme.

7 Turn off the appliance

 
 
- Turn the appliance off using the On/Off button.

8 Remove dishes from the appliance


- When the dishwasher is off, open the door and wait about 15 minutes before removing the dishes. This will also facilitate the drying process. Hot dishes are more susceptible to cracking.

9 Features and components

- Spray arms
- Cutlery basket
- Upper basket
- Inner tube
- Lower basket
- Salt container
- Detergent dispenser
- Mugs and cups shelves
- Main filter
- Water supply hose connection
- Water drain hose
- Regulator

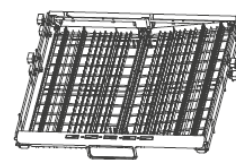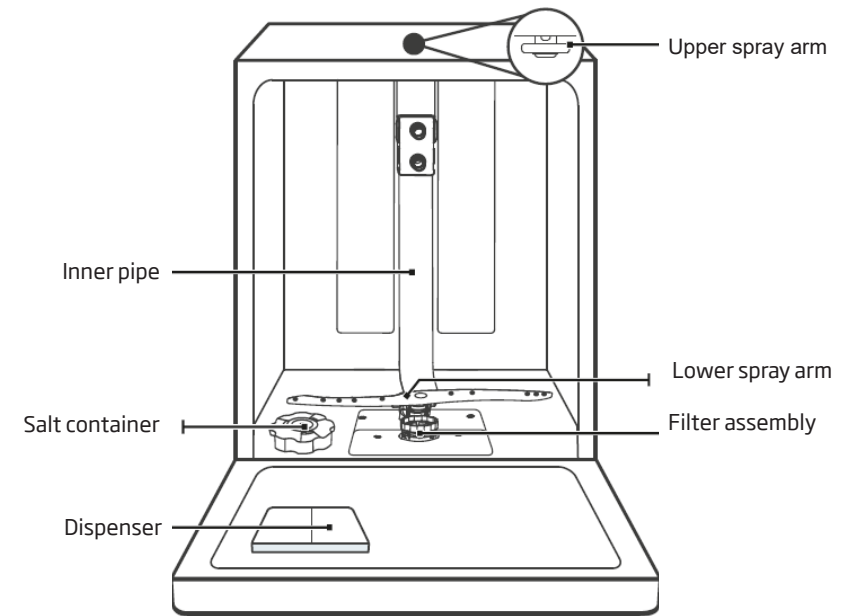

Cutlery basket

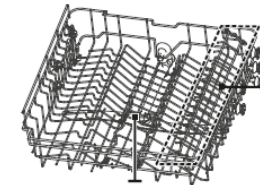 

Upper spray arm
Cup rack



Lower basket



NOTE: Figures are for illustrative purposes only Individual models may vary.

TABLE OF WASH PROGRAMMES: ZIM608EH

Programme name	Auto	Intensive	Universal	**ECO	Glass	90'	Rapid 50'	Soak
Temperature	55-65°C	65°C	55°C	45°C	50°C	60°C	50°C	-
Type of soil	Automatic programme selection for any type of soil, including residual dried food on the dishes.	Heavily soiled dishes with dried food residue.	Soiled dishes with dried food residue.	Lightly soiled glass-ware and porcelain.	Lightly soiled glass-ware and porcelain.	Lightly soiled dishes that do not require full drying.	Quick programme for lightly soiled dishes, which do not require drying.	For dishes waiting to be washed.
Soil level	Varying soil	Heavily soiled	Normal soil	Light soil	Light soil	Light soil	Light soil	-
Amount of detergent	4g /18g (or 2 in 1)	4g /18g (or 2 in 1)	4g /18g (or 2 in 1)	22g (or 2 in 1)	4g /18g (or 2 in 1)	22g (1)	20g (1)	-

Pre-wash 45°C	Pre-wash 50°C	Pre-wash 45°C	Wash 45°C	Pre-wash	Wash 60°C	Wash 50°C	Pre-wash
Automatic wash 55-65°C	Wash 65°C	Wash 55°C	Rinse	Wash 50°C	Rinse	Rinse	
Rinse	Rinse	Rinse	Rinse 60°C	Rinse	Rinse 65°C	Rinse 45°C	
Auto Rinse 60-65°C	Rinse	Rinse 65°C	Dry	Rinse 65°C	Dry		
Dry	Rinse 65°C	Dry		Dry			
	Dry						

*Programme duration [min]	150	205	175	220	120	90	30	15
*Energy consumption [kWh]	0.901-1.312	1.621	1.302	0.951	1.100	1.100	0.751	0.020
*Water consumption [l]	11.0-15.0	17.8	14.3	11.0	14.3	11.7	11.2	4.1

** Standard programme This is a reference program for research institutes. Tests according to EN 60436. This programme is suitable for washing normally soiled tableware. This is the most effective programme taking into account the total energy and water consumption for this kind of tableware.

* Programme duration, energy and water consumption value given in the table have been determined under laboratory conditions. Actual values can vary.