

**AMM44BEXH**

---

# CONTENTS

CONTENTS	2
PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY	3
ADDENDUM	3
SPECIFICATIONS	3
IMPORTANT SAFETY INSTRUCTION	4-5
TO REDUCE THE RISK OF INJURY TO PERSONS GROUNDING INSTALLATION	6-8
IMPORTANT SAFETY INSTRUCTIONS	6-8
SETTING UP YOUR OVEN	8-9
IMPORTANT INFORMATION ABOUT INSTALLING	9
FITTED UNITS	10
INSTALLATION DIMENSIONS	10
BUILDING IN	10-11
INSTALL THE GRILL PAN	12
BEFORE FIRST USE	13
OPERATION INSTRUCTION	14-23
TROUBLESHOOTING	24

## PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- (a) Do not attempt to operate this oven with the door open since this can result in harmful exposure to microwave energy. It is important not to break or tamper with the safety interlocks.
- (b) Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- (c) **WARNING:** If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.

## ADDENDUM

If the apparatus is not maintained in a good state of cleanliness, its surface could be degraded and affect the lifespan of the apparatus and lead to a dangerous situation.

## Specifications

Model:	AMM44BEXH
Rated Voltage:	230V~50Hz
Rated Input Power(Microwave):	1650W
Rated Output Power(Microwave):	900W
Rated Input Power(Grill):	1750W
Rated Input Power(Convection):	1750W
Rated Input Power(Combination):	3350W
Oven Capacity:	44L
Turntable Diameter:	∅ 360mm
External Dimensions:	594 × 568 × 455 mm
Net Weight:	Approx. 40 kg


# IMPORTANT SAFETY INSTRUCTIONS

## WARNING

To reduce the risk of fire, electric shock, injury to persons or exposure to excessive microwave oven energy when using your appliance, follow basic precautions, including the following:

1. Warning: Liquids and other foods must not be heated in sealed containers since they are liable to explode.
2. Warning: It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.
3. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
4. Keep the appliance and its cord out of reach of children less than 8 years.
5. Only use utensils suitable for use in microwave ovens.
6. The oven should be cleaned regularly and any food deposits should be removed.
7. Read and follow the specific: "PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY".
8. When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.
9. If smoke is emitted, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
10. Do not overcook food.
11. Do not use the oven cavity for storage purposes. Do not store items, such as bread, cookies, etc. inside the oven.
12. Remove wire twist-ties and metal handles from paper or plastic containers/bags before placing them in the oven.
13. Install or locate this oven only in accordance with the installation instructions provided.
14. Eggs in the shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.
15. This appliance is intended to be used in household and similar applications such as:
  - staff kitchen areas in shops, offices and other working environments;
  - by clients in hotels, motels and other residential type environments;
  - farm houses;
  - bed and breakfast type environments.
16. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
17. Do not store or use this appliance outdoors.
18. Do not use this oven near water, in a wet basement or near a swimming pool.
19. The temperature of accessible surfaces may be high when the appliance is operating. The surfaces are liable to get hot during use. Keep cord away from heated surface, and do not cover any vents on the oven.
20. Do not let cord hang over edge of table or counter.
21. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
22. The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.

23. Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.
24. Children should be supervised to ensure that they do not play with the appliance.
25. The appliances are not intended to be operated by means of an external timer or separate remote-control system.
26. Accessible parts may become hot during use. Young children should be kept away.
27. Steam cleaner is not to be used.
28. During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven.
29. Only use the temperature probe recommended for this oven. (for ovens provided with a facility to use a temperature-sensing probe.)
30. **WARNING:** The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements. Children less than 8 years of age shall be kept away unless continuously supervised.
31. The microwave oven must be operated with the decorative door open. (for ovens with a decorative door.)
32. Surface of a storage cabinet can get hot.

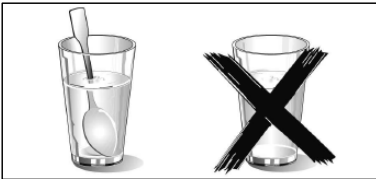

- If you are heating liquid in the microwave, then you must also place a teaspoon in the container. This will ensure that the liquid does not boil suddenly after being removed from the microwave cavity.

**READ CAREFULLY AND KEEP FOR FUTURE REFERENCE**

# To Reduce the Risk of Injury to Persons Grounding Installation

## DANGER

### Electric Shock Hazard

Touching some of the internal components can cause serious personal injury or death.

Do not disassemble this appliance.

## WARNING

### Electric Shock Hazard

Improper use of the grounding can result in electric shock. Do not plug into an outlet until appliance is properly installed and grounded.

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

Consult a qualified electrician or serviceman if the grounding instructions are not completely understood or if doubt exists as to whether the appliance is properly grounded. If it is necessary to use an extension cord, use only a 3-wire extension cord.

1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
2. If a long cord set or extension cord is used:
  - 1)The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
  - 2)The extension cord must be a grounding-type 3-wire cord.
  - 3)The long cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.

## CLEANING

Be sure to unplug the appliance from the power supply.

1. Clean the cavity of the oven after using with a slightly damp cloth.
2. Clean the accessories in the usual way in soapy water.
3. The door frame and seal and neighbouring parts must be cleaned carefully with a damp cloth when they are dirty.
4. Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
5. Cleaning Tip---For easier cleaning of the cavity walls that the food cooked can touch:  
Place half a lemon in a bowl, add 300ml (1/2 pint) water and heat on 100% microwave power for 10 minutes.  
Wipe the oven clean using a soft, dry cloth.

# UTENSILS

## CAUTION

### Personal Injury Hazard

It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.

See the instructions on "Materials you can use in microwave oven or to be avoided in microwave oven."

There may be certain non-metallic utensils that are not safe to use for microwaving. If in doubt, you can test the utensil in question following the procedure below.

#### Utensil Test:

1. Fill a microwave-safe container with 1 cup of cold water (250ml) along with the utensil in question.
2. Cook on maximum power for 1 minute.
3. Carefully feel the utensil. If the empty utensil is warm, do not use it for microwave cooking.
4. Do not exceed 1 minute cooking time.

## Materials you can use in microwave oven

Utensils	Remarks
Aluminum foil	Shielding only. Small smooth pieces can be used to cover thin parts of meat or poultry to prevent overcooking. Arcing can occur if foil is too close to oven walls. The foil should be at least 1 inch (2.5cm) away from oven walls.
Browning dish	Follow manufacturer's instructions. The bottom of browning dish must be at least 3/16 inch (5mm) above the turntable. Incorrect usage may cause the turntable to break.
Dinnerware	Microwave-safe only. Follow manufacturer's instructions. Do not use cracked or chipped dishes.
Glass jars	Always remove lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break.
Glassware	Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes.
Oven cooking bags	Follow manufacturer's instructions. Do not close with metal tie. Make slits to allow steam to escape.
Paper plates and cups	Use for short-term cooking/warming only. Do not leave oven unattended while cooking.
Paper towels	Use to cover food for reheating and absorbing fat. Use with supervision for a short-term cooking only.
Parchment paper	Use as a cover to prevent splattering or a wrap for steaming.
Plastic	Microwave-safe only. Follow the manufacturer's instructions. Should be labeled "Microwave Safe". Some plastic containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as directed by package.
Plastic wrap	Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food.
Thermometers	Microwave-safe only (meat and candy thermometers).
Wax paper	Use as a cover to prevent splattering and retain moisture.

# Materials to be avoided in microwave oven

Utensils	Remarks
Aluminum tray	May cause arcing. Transfer food into microwave-safe dish.
Food carton with metal handle	May cause arcing. Transfer food into microwave-safe dish.
Metal or metal-trimmed utensils	Metal shields the food from microwave energy. Metal trim may cause arcing.
Metal twist ties	May cause arcing and could cause a fire in the oven.
Paper bags	May cause a fire in the oven.
Plastic foam	Plastic foam may melt or contaminate the liquid inside when exposed to high temperature.
Wood	Wood will dry out when used in the microwave oven and may split or crack.


## SETTING UP YOUR OVEN

### Names of Oven Parts and Accessories




Remove the oven and all materials from the carton and oven cavity

Your oven comes with the following accessories:

Enamel Tray	1
Turntable ring assembly	1
Instruction Manual	1

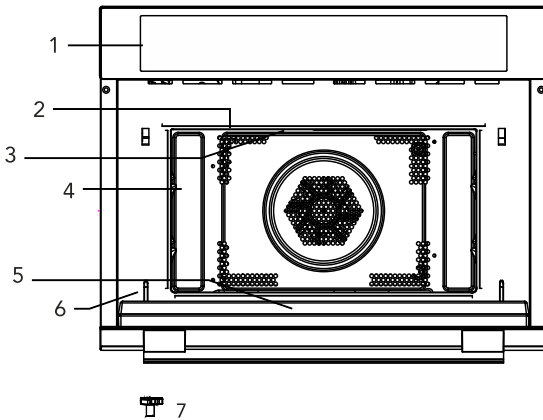


1. Control panel
2. Grille element
3. Light
4. Level
5. Doorglass
6. Hinge
7. Turntable shaft

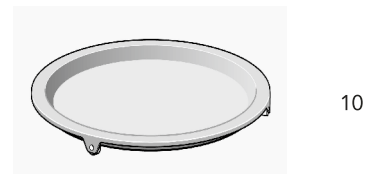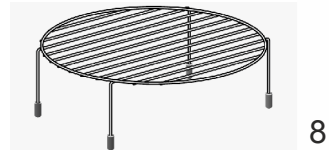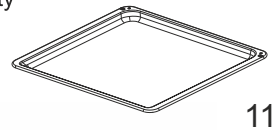

8. Short Grill Rack
9. Long Grill Rack
10. Enamel tray
11. Glass plate



# Turntable Installation

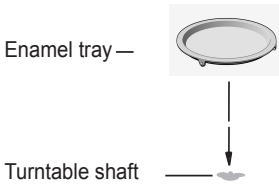

- a. Never place the enamel tray upside down. The enamel tray should never be restricted.
- b. The enamel tray must always be used during cooking.
- c. All food and containers of food are always placed on the enamel tray for cooking.
- d. If enamel tray cracks or breaks, contact your nearest authorized service center.

## IMPORTANT INFORMATION ABOUT INSTALLING

### Electrical connection

- The appliance is fitted with a plug and must only be connected to a properly installed earthed socket.
- Only a qualified electrician who takes the appropriate regulations into account may install the socket or replace the connecting cable.
- If the plug is no longer accessible following installation, an all-pole isolating switch must be present on the installation side with a contact gap of at least 3 mm.
- Contact protection must be ensured by the installation.
- Fuse protection: see instructions for use - technical data.

The accessible surface  
may be hot during  
operation.




## Fitted units

- This appliance is only intended to be fully fitted in a kitchen.
- This appliance is not designed to be used as a tabletop appliance or inside a cupboard.
- The fitted cabinet must not have a back wall behind the appliance.
- A gap of at least 100 mm must be maintained between the wall and the base or back panel of the unit above.
- The fitted cabinet must have a ventilation opening of 250 cm<sup>2</sup> on the front. To achieve this, cut back the base panel or fit a ventilation grille.
- Ventilation slots and intakes must not be covered.
- The safe operation of this appliance can only be guaranteed if it has been installed in accordance with these installation instructions.
- The fitter is liable for any damage resulting from incorrect installation.
- The units into which the appliance is fitted must be heat-resistant up to 90 °C.

## Installation dimensions

### Ventilation openings


behind, min. 250 cm<sup>2</sup>

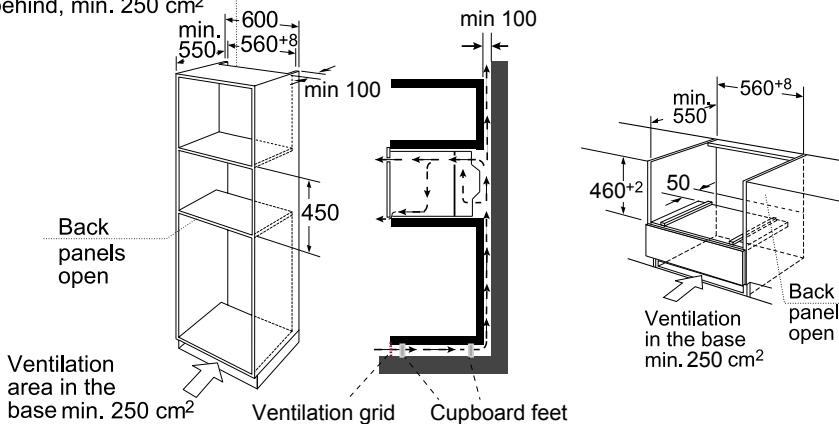


Note: There should be gap above the oven.

## Building in


- Do not hold or carry the appliance by the door handle. The door handle cannot hold the weight of the appliance and may break off.
1. Carefully push the microwave into the box, making sure that it is in the centre.
  2. Open the door and fasten the microwave with the screws that were supplied.

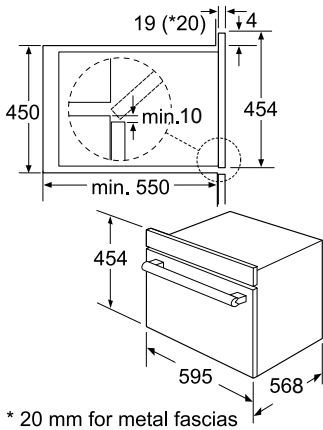

\* 20 mm for metal fascias

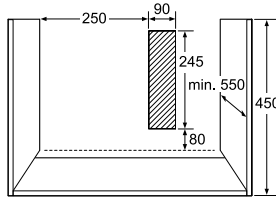


Power cord opening size

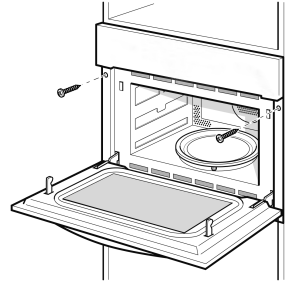


- Fully insert the appliance and centre it.
- Do not kink the connecting cable.
- Screw the appliance into place.
- The gap between the worktop and the appliance must not be closed by additional battens.

# INSTALL THE GRILL PAN

1. Be sure the angle of the shaft.

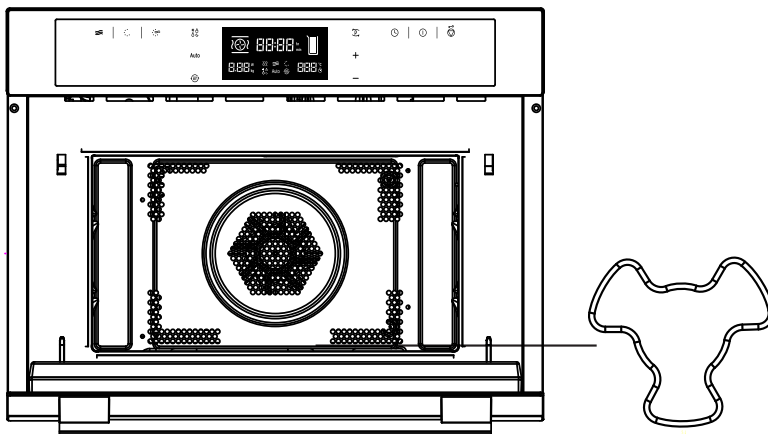

2. Adjust the angel of the grill pan and the shaft.

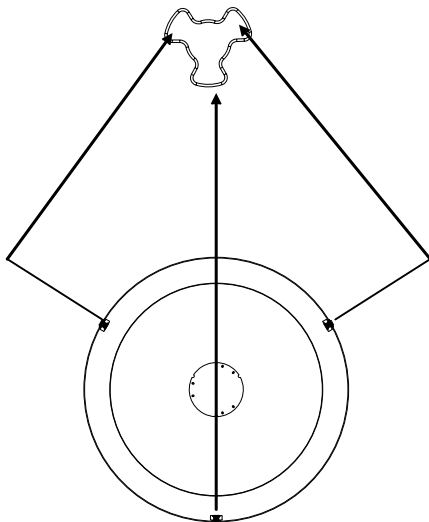




3. Put the pan into the cavity and adjust slightly.

# BEFORE FIRST USE

## Initial cleaning and heating

Removing the microwave oven all of the protection foil on the front.

For more information see the "CLEANING". Before the first use of the appliance,

- Remove all accessories and wash out of the microwave.
- Electric heating empty containers. New appliances typically smell when first used. Before using the electrical appliance to cook food faster to heat it helps to banish odors.
- Before heating, it is best to wipe the microwave oven interior with a damp cloth. In this way, storage and untwisting appliances accumulated in the packaging process in furnace dust or residual packing material can be removed.
- Touch "  " keys. Appliance turn on, the main menu appears in the display.
- Touch "  " to choose the convection function.  
Recommended temperature of 160 ° C will be highlighted, along with microwave started directly.
- Raise the temperature to 230 ° C (maximum temperature). This can be achieved by using beside proximity keys or the numeric keypad to achieve.
- Touch "  " symbol next to the sensor keys. Heat the empty oven for at least an hour.  
When you do this, make sure that the room well ventilated. Close the door to the other room to avoid odor pervaded the House.
- Let the appliance cool down to room temperature. Then solution of neutral detergent mixed with hot water to clean inside the microwave oven, then wipe dry with a clean soft cloth.  
Keep the door open until completely dry in the oven.

# OPERATION INSTRUCTION


## Control Panel





This microwave oven uses modern electronic control to adjust cooking parameters to meet your needs better for cooking.

### 1. Clock Setting

When the microwave oven is electrified, "00:00" will blink, buzzer will ring once.



- 1) Press " + " or " - " to set the right time (between 00:00 and 23:59.)
- 2) After you have set the right time, press "  ". The clock has been set.


Note: 1) If you want to change the time, you have to press and hold the "  " button for 3 seconds. The actual time disappears and then the time will blink in the display.

Press " + " or " - " to set the new time and press the "  " button to confirm the setting.


- 2) When you set the clock, press " + " or " - " when adjusting 10MIN, short press time (each time you adjust 1MIN). □□

### 2. Microwave Cooking

- 1) Press the "  " button to activate the microwave function. "01:00" lights in the display and the microwave icon appears. If no operation in 10 seconds, the current power will be confirmed automatically.
- 2) Press " + " or " - " to adjust the microwave power. If you want to change the power, press "  " button and then press " + " or " - " to set the microwave power. (between 100W to 900W)

3) Press "  " to set the cooking time. Press " + " or " - " to adjust the cooking time.

The max. cooking time depends on the power that has been set. When the power is 900W, the MAX. time is 30 minutes and other powers are 90 minutes.

4) Press "  " button to start cooking.















### Microwave Power Chart

Microwave Power	100%	80%	50%	30%	10%
Display	900W	700W	450W	300W	100W

You can see from the table below from which power levels you can choose and for which foods the power levels are suitable.



 




Power level	Food
900 W	- Boiling water, reheating - Cooking chicken, fish, vegetables
700 W	- Reheating - Cooking mushrooms, shell fish - Cooking dishes containing eggs and cheese
450 W	- Cooking rice, soup
300 W	- Defrosting - Melting chocolate and butter
100 W	- Defrosting sensitive/delicate foods - Defrosting irregularly-shaped foods - Softening ice cream - Allowing dough to rise

## Functions








Function		Mode	
	Microwave		<b>Microwave</b> <ul style="list-style-type: none"> <li>Use the microwave function to cook and reheat vegetables, potatoes, rice, fish and meat.</li> </ul>
	Heat		<b>Hot air</b> <ul style="list-style-type: none"> <li>With hot air you can prepare meals in the same way as you do with a conventional oven. The microwave is not activated. You are advised to preheat the oven before putting the meal in the oven.</li> </ul>
			<b>Fan grill</b> <ul style="list-style-type: none"> <li>Use this function to roast meals evenly and at the same time give the meal a brown crust.</li> </ul>
			<b>BottomGrill + Convection</b> <ul style="list-style-type: none"> <li>This is used to bake pizza, moist pastry, fruitcakes, leavened dough and short crust.</li> </ul>
			<b>Grill</b> <ul style="list-style-type: none"> <li>The grill is very suitable to prepare thin pieces of meat and fish.</li> </ul>
	Combination		<b>MW + Convection</b> <ul style="list-style-type: none"> <li>Use this function to roast meals quickly.</li> </ul>
			<b>MW + Fan grill</b> <ul style="list-style-type: none"> <li>Use this combination for smaller chunks of meat, fish and vegetables.</li> <li>It allows fast cooking and the food will have a nicely browned crispy crust.</li> </ul>
			<b>MW + BottomGrill + Convection</b> <ul style="list-style-type: none"> <li>Use this combination for dishes that require fast cooking and additional heat to the base.</li> </ul>
			<b>MW + Grill</b> <ul style="list-style-type: none"> <li>Use this function to cook meals quickly and at the same time give the meal a brown crust (also au gratin). The microwave and the grill are activated at the same time. The microwave is cooking and the grill is roasting.</li> </ul>
	Auto-programs		<b>P01 - P13</b> <ul style="list-style-type: none"> <li><b>Automatic cooking programs</b> <ul style="list-style-type: none"> <li>Automatic cooking programmes can be used for roasting all kinds of meat.</li> <li>You can choose from 13 Auto programmes.</li> <li>Select the programme and the weight of the dish.</li> </ul> </li> </ul>
	Defrost		<b>D01-D03</b> <ul style="list-style-type: none"> <li><b>Defrost</b> <ul style="list-style-type: none"> <li>You can choose from 3 defrost programmes.</li> <li>Select the programme and the weight of the dish.</li> </ul> </li> </ul>






 



### 3. Grill Cooking

- 1) Press "  " button to activate the heat function. "  " indicator lights.
- 2) Press "  " or " + " or " - " to select grill mode. The default grill power is the third level. "  " indicator will light when grill function is selected.
- 3) Press "  " to enter to the grill level.
- 4) Press " + " or " - " to select the level 3(the MAX.), level 2 or level 1(the MIN.).
- 5) Press "  " to select the time setting mode. The default time is 10 minutes.  
Press " + " or " - " to select the cooking time of grill. The MAX.time is 90 minutes.
- 6) Press "  " button to start cooking.








### 4. Convection Cooking

- 1) Press "  " button to activate the heat function. "  " indicator lights.
- 2) Press "  " or " + " or " - " to select convection mode. "  " lights.  
The default temperature is 180 degrees.
- 3) Press "  " to enter to the temperature mode.
- 4) Press " + " or " - " to select temperature. The temperature is from 50 to 230 degrees. (50,100,105,110.....230)
- 5) Press "  " to select the time setting mode. The default time is 10 minutes.  
Press " + " or " - " to select the cooking time. The MAX.time is 5 hours.
- 6) Press "  " button to start cooking.










## 5. Fan Grill Cooking

- 1) Press "  " button to activate the heat function. "  " indicator lights.
- 2) Press "  " or " + " or " - " to select Fan Grill mode. The default temperature is 180 degrees. "  " indicator will light when fan grill function is selected.
- 3) Press "  " to enter to the temperature selection.
- 4) Press " + " or " - " to select the temperature between 100 to 230 degrees. (100,105,110,115.....230)
- 5) Press "  " to select the time setting mode. The default time is 10 minutes. Press " + " or " - " to select the cooking time. The MAX.time is 5 hours.
- 6) Press "  " button to start cooking.










## 6. BottomGrill+Convection Cooking

- 1) Press "  " button to activate the heat function. "  " indicator lights.
- 2) Press "  " or " + " or " - " to select BottomGrill+Convection mode. The default temperature is 180 degrees. "  " indicator will light when BottomGrill+Convection function is selected.
- 3) Press "  " to enter to the temperature selection.
- 4) Press " + " or " - " to select the temperature between 100 to 230 degrees. (100,105,110,115.....230)
- 5) Press "  " to select the time setting mode. The default time is 10 minutes. Press " + " or " - " to select the cooking time. The MAX.time is 5 hours.
- 6) Press "  " button to start cooking.





 




## 7. MW + Grill Cooking

- 1) Press "  " button to activate the combination function. "  " and "  " will light.
- 2) Press "  " or " + " or " - " to select mode. "  " indicator will light when MW+grill function is selected. The default grill power is level 3.
- 3) Press "  " to enter to the grill power level selection.  
Press " + " or " - " to select the grill power.
- 4) Press "  " to select the microwave power. The default power is 300W  
Press " + " or " - " to select 700W,450W,300W and 100W
- 5) Press "  " to select the time setting mode. The default time is 10 minutes.  
Press " + " or " - " to select the cooking time . The MAX.time is 90 minutes.
- 6) Press "  " button to start cooking.










## 8. MW + Convection Cooking

- 1) Press "  " button to activate the combination function. "  " and "  " will light.
- 2) Press "  " or " + " or " - " to select MW+convection mode. the default temperature is 180 degrees. "  " lights.
- 3) Press "  " to enter to the temperature selection.  
Press " + " or " - " to select the temperature between 50 to 230 degrees.
- 4) Press "  " to select the power. The default power is 300W  
Press " + " or " - " to select 700W,450W,300W and 100W.
- 5) Press "  " to select the time setting mode. The default time is 10 minutes.  
Press " + " or " - " to select the cooking time of grill. The MAX.time is 90 minutes.
- 6) Press "  " button to start cooking.

 


## 9. MW+ Fan Grill Cooking

- 1) Press "  " button to activate the combination function. "  " and "  " will light.
- 2) Press "  " or " + " or " - " to select MW+Fan Grill mode. "  " lights.  
the default temperature is 180 degrees.
- 3) Press "  " to enter to the temperature selection.  
Press " + " or " - " to select the temperature between 100 to 230 degrees.
- 4) Press "  " to select the power. The default power is 300W  
Press " + " or " - " to select 700W,450W,300W and 100W
- 5) Press "  " to select the time setting mode. The default time is 10 minutes.  
Press " + " or " - " to select the cooking time of grill. The MAX.time is 90 minutes.
- 6) Press "  " button to start cooking.




## 10. MW + BottomGrill + Convection Cooking

- 1) Press "  " button to activate the combination function. "  " and "  " will light.
- 2) Press "  " or " + " or " - " to select MW+Fan Grill mode. "  " lights.  
the default temperature is 180 degrees.
- 3) Press "  " to enter to the temperature selection.  
Press " + " or " - " to select the temperature between 100 to 230 degrees.
- 4) Press "  " to select the power. The default power is 300W  
Press " + " or " - " to select 700W,450W,300W and 100W
- 5) Press "  " to select the time setting mode. The default time is 10 minutes.  
Press " + " or " - " to select the cooking time of grill. The MAX.time is 90 minutes.
- 6) Press "  " button to start cooking.

## 11. Defrost By Weight



- 1) Press "  " to activate the defrosting function.
- 2) Press " + " or " - " to select the D01 mode or D02 mode.
- 3) Press "  " button.  
Press " + " or " - " to select weight of food from 200 to 1000g(D01) or from 100 to 500g(D02) .
- 4) Press "  " button to start defrosting.

## 12. Defrost By Time

- 1) Press "  " to activate the defrosting function.
- 2) Press " + " or " - " to select the D03 mode.
- 3) Press "  " button.  
Press " + " or " - " to select the defrost time. The MAX time is 90 minutes.
- 4) Press "  " button to start defrosting.

## 13. Auto Cook

There are 13 automatic cooking programs. You only have to choose the program and set the weight. The power, the time and the temperature are already set.

- 1) Press " **Auto** " button to activate the Auto Cook.
- 2) Press " **Auto** " for times or press " + " or " - " to select the menu.
- 4) Press "  " button.
- 5) Press " + " or " - " to select weight of the food.
- 6) Press "  " button to start cooking.




## Menu Chart

Program	Category	Item
P01**	Vegetables	Fresh vegetables
P02**	Side dishes	Potatoes - peeled/cooked
P03*	Side dishes	Potatoes - roasted If you hear a beep, turn the food. The combi microwave oven starts the next fase automatically
P04	Poultry/□Fish	Chicken pieces/ □Fish pieces If you hear a beep, turn the food. The combi microwave oven starts the next fase automatically.
P05*	Bakery	Cake
P06*	Bakery	Apple pie
P07*	Bakery	Quiche
P08**	Reheat	Drink/soup
P09**	Reheat	Plated meal
P10**	Reheat	Sauce/stew/dish
P11*	Convenience	Frozen-Pizza
P12*	Convenience	Frozen-Oven Chips
P13*	Convenience	Frozen-Lasagne

- The programmes with a \* are preheated. During preheating, the cooking time pauses and the preheating symbol is on. After preheating, you wil hear an alarm and the preheating symbol will blink.
- The programmes with \*\* only use the microwave function.



## 14. Preheating Function



The preheating function can be activated after you have chosen the functions: Convection, Fan Grill, MW-convection, BottomGrill+Convection, MW-Grill fan, MW+BottomGrill+Convection.

- 1) Press "  " button. The preheat icon appears in the display.
- 2) Press "  " button to start preheating. If the right temperature is reached, you will hear three beeps. You can stop the preheating by opening the oven door or by pressing the "  " button.


Note: The preheating function only works if you have already chosen one of the modes above. During preheating, the microwave function is switched off.

## 15. Lock-out Function for Children

Lock: In waiting state, press "  " for 3 seconds, there will be a long "beep" denoting entering into the children-lock state and "  " indicator will light.

Unlock: In locked state, press "  " for 3 seconds, there will be a long "beep" denoting that the lock is released, and "  " indicator will disappear.

## 16. Display Specification

- (1) When setting, if no other operation, it will confirm automatically after 10 seconds. Except clock setting for the first time.
- (2) During setting program, after adjusted for 3 seconds, it will confirm after 3 seconds.
- (3) When the oven is in setting state or pause state, including auto menu and defrost program, if no operation in 5 minutes, it will enter into the off state.
- (4) The oven lamp will light all the time if the door is open.
- (5) The oven lamp will light all the time if the oven is paused.
- (6) "  " button must be pressed to continue cooking if the oven door is open during cooking process.

## TROUBLE SHOOTING

<b>Normal</b>	
Microwave oven interfering TV reception	Radio and TV reception may be interfered when microwave oven operating. It is similar to the interference of small electrical appliances, like mixer, vacuum cleaner, and electric fan. It is normal.
Dim oven light	In low power microwave cooking, oven light may become dim. It is normal.
Steam accumulating on door, hot air out of vents	In cooking, steam may come out of food. Most will get out from vents. But some may accumulate on cool place like oven door. It is normal.
Oven started accidentally with no food in.	It is forbidden to run the unit without any food inside. It is very dangerous.

<b>Trouble</b>	<b>Possible Cause</b>	<b>Remedy</b>
Oven can not be started.	(1) Power cord not plugged in tightly.	Unplug. Then plug again after 10 seconds.
	(2) Fuse blowing or circuit breaker works.	Replace fuse or reset circuit breaker (repaired by professional personnel of our company)
	(3) Trouble with outlet.	Test outlet with other electrical appliances.
Oven does not heat.	(4) Door not closed well.	Close door well.
Glass turntable makes noise when microwave oven operates	(5) Dirty roller rest and oven bottom.	Refer to "Maintenance of Microwave" to clean dirty parts.



According to Waste of Electrical and Electronic Equipment (WEEE) directive, WEEE should be separately collected and treated. If at any time in future you need to dispose of this product please do NOT dispose of this product with household waste. Please send this product to WEEE collecting points where available.